How to Choose the Correct Generator



40 AMP

50 AMP

14-50

GenerLink

Three simple steps to selecting the correct generator to pair with your GenerLink transfer switch.

For more information on how to find out which generator is right for you, refer to the GenerLink Operation Manual. Your generator must have one of these receptacles:

Your generator must be in these wattage ranges:



30 AMP

GenerLink

Generator Wattage 4,800 – 9,600 Running Watts

30 AMP

L14 - 30

OR

20 AMP

14 - 20

3 Ye

Your generator must NOT have a full GFCI panel

